

PRESSURE, VACUUM, DIFFERENTIAL PRESSURE,

AND TEMPERATURE SWITCHES













- 316 Stainless Steel Construction withstands the harshest environments
- Hermetically Sealed Micro-switch
- Vibration Resistant Belleville provides set point stability
- UL, cUL, ATEX and IECEx approved
- Dual Seal provides process sealing between electrical system and combustible process fluids








OVERVIEW

12 Series hazardous location switches are ideal for operation in tough applications where space is at a premium. A snap-action Belleville spring assembly is used in most models to provide vibration resistance and prolonged switch life. The 316 stainless steel enclosure and hermetically sealed switch provide rugged protection from the environment. Approved for use in hazardous locations worldwide, the 12 Series is installed within applications ranging from offshore oil rigs to rotating equipment, and more.

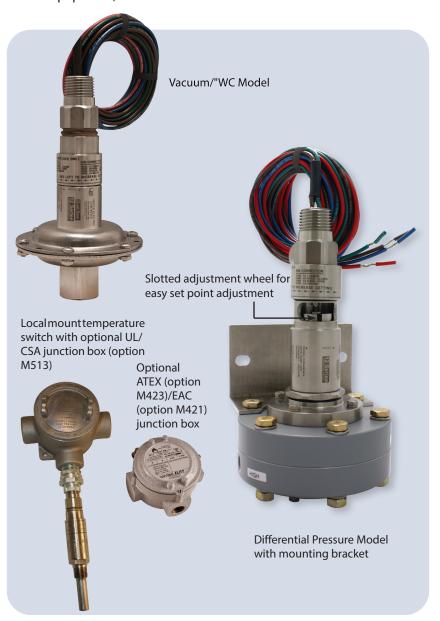

FEATURES

- UL, cUL, ATEX and IECEx approved for Div. 1 or Zone 1 hazardous locations; CE compliant
- Dual seal compliant to ANSI/ISA 12.27.01 & NEC 501.17
- Many models compliant to NACE MR0175.
- Snap-acting Belleville spring for long life, vibration resistance and stability
- Optional Hastelloy® and Monel® sensor material for corrosive media
- Mounting bracket available for retrofit applications
- 72" leadwires
- 3-year warranty

WORLDWIDE COMPLIANCE

Quadruple approvals (UL, cUL, ATEX and IECEx) mean the 12 Series meets the demanding requirements of critical applications within hazardous locations. Additionally, the 12 Series complies with ANSI/ISA 12.27.01, "secondary seal requirements for process sealing between electrical systems and flammable or combustible process fluids," and NEC 501.17, "process sealing." It can be used in a variety of applications where space is at a premium. Metal wetted parts comply with NACE MR0175 and the 316 stainless steel, type 4X enclosure rating assure long-term performance in the harshest environments.

APPLICATIONS

Offshore Platforms



Instrument Panels



Chemical Plants & Refineries

Rotating Equipment






TECHNOLOGY

At the heart of the 12 Series is a Belleville spring assembly. The spring is a small conical washer that transfers motion to a hermetically sealed 1 or 5 amp microswitch. Its 'snap-action' provides fast, positive contact transfer. The Belleville spring 'snaps over' when pressure is applied and 'snaps back' upon pressure release.

Advantages:

- <u>Set point stability:</u> The switch performs under challenging environmental conditions such as vibration and temperature changes. In addition, minimal movement of components reduces sensor fatigue, thereby increasing life and accuracy.
- Resistance to vibration: Preloading of the electrical switch helps reduce 'contact chatter.'
- <u>Small size</u>: Belleville springs are simple in appearance, but can deliver a heavy load with a relatively small deflection, contributing to a compact design.
- <u>Deadbands</u>: The Belleville is a 'negative-rate' snap acting device, so on-off deadband values are wider at the low end of the range. To minimize deadbands, select a model with a set point at the higher end of the range whenever possible.

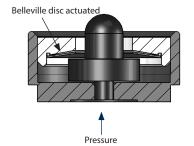



SPECIFICATIONS

OPERATING AMBIENT

TEMPERATURE

-58 to 176°F (-50 to 80°C); Sensor Type K: 0°F to 160°F (-18°C to 71°C). Set point shifts less than 1% of range for a 50°F (28°C) ambient temperature change. Slight ambient effects for 25-50' extra capillary length on temperature switch models, consult factory.

MEDIA TEMPERATURE

Pressure models: Sensor types 2, 7, 9: -50 to 400°F (-45 to 204°C)

Sensor types 3, 4, 8: -20 to 200°F (-28 to 93°C) Sensor types 5, 6: 0 to 320°F (-18 to 160°C)

Sensor type P, W: 0 to 200°F (-18 to 93°C); 20 to 250°F (-7 to 121°C) for

optional Viton sensor

Differential pressure models: Sensor type K: 0 to 160°F (-18 to 71°C);

20 to 250°F (-7 to 121°C) for optional Viton sensor Temperature models: See model chart (Pg. 9).

SET POINT

Temperature models: ±1% of adjustable range

REPEATABILITY Pressure models: Sensor types 2, P: ±1.5% of adjustable range

Sensor types 3-9, W: ±1% of adjustable range

Differential pressure models: K1 to K3: $\pm 1\%$, K4 to K6: $\pm 1.5\%$ of adjustable

range

SHOCK

Differential pressure and temperature models: set point repeats after

15 G's, 10 millisecond duration

Pressure models: Set point repeats after 75 G's, 10 milliseconds

VIBRATION

Differential pressure and temperature models: Set point repeats after

2.5 G's, 10-2000 Hz.

Pressure models: Set point repeats after 15 G's, 10-2000 Hz

ENCLOSURE

316 stainless steel

ENCLOSURE

Certified to Enclosure Type 4X

CLASSIFICATION

Class I, Division 1 product meets enclosure Type 7; Class II, Division I product meets enclosure Type 9.

Certified to IP66 requirements

SWITCH OUTPUT

Code S: One SPDT, hermetically sealed.

Code D: Two SPDT for DPDT action, hermetically sealed. Available for pressure

models only.

ELECTRICAL RATINGS

Code H: 5 A at 125/250 VAC, 5 A resistive and 3 A inductive at 28 VDC.

Silver contacts

Code L: 1 A at 125 VAC, 1 A resistive and 0.5 A inductive at 28 VDC

Bifurcated gold contacts

ELECTRICAL CONNECTION

Code N: 1/2" NPT (male) with 72" leadwires Code M: M20 metric threads, 72" leadwires

Option M515, 4 terminal DIN connector (DIN 43650 Form A) available SPDT only

(does not meet Div. 1 or 2, or ATEX requirements.)

WEIGHT

Temperature models: approximately 1 lb 14 oz. (0,85 kg) Pressure models: approximately 12 ounces (0,34 kg) Vacuum, "WC models: Approximately 1lb 12 oz (0,79 kg) Differential models: K1-K3: approximately 6 lb (2,72 kg)

K4-K6: approximately 4 lb (1,81 kg)

K1-K3 w/ option M480: approximately 10 lb (4,55 kg) K4-K6 w/ option M480: approximately 5.5 lb (2,5 kg)

TEMPERATURE Bulb and capillary: Non-toxic oil fill; 6 feet 304 stainless steel. Optional lengths available

ASSEMBLY Immersion Stem: 316 stainless steel

TEMPERATURE Typically 2% of range under laboratory conditions

DEADBAND (70°F ambient circulating bath at a rate of 1/2°F per minute change)

PRESSURE 1/2" NPT (female) or 1/4" NPT (female). CONNECTION Differential pressure: 1/8" NPT (female)

Optional pressure connection materials available, see page 12.

MOUNTING Pressure: May be pipe mounted or bracket mounted using kit 62169-13

Differential Pressure: Should be mounted using 2 mounting holes on attached mounting bracket

Temperature: Mounting kit 62169-13 should be specified for new installations

APPROVALS

UE declarations and third-party issued Agency certifications are available for download at www.ueonline.com/certs.

UNITED STATES AND CANADA

UL Listed, cUL Certified

Class I, Division 1 and 2, Groups A, B, C & D Class II, Division 1 and 2, Groups E, F & G

Class III

DUAL SEAL CERTIFIED

Class I, Zone 1, Group IIC **Enclosure Type 4X**

Pressure: UL 508 & 1203; CSA C22.2 No. 14, 25 & 30 - File # E40857

Dual seal certified to ANSI/ISA 12.27.01 (meets CEC & NEC secondary seal

requirements) standard on straight pressure models only

Temperature: UL 873, 1203; CSA C22.2 No. 24, 25 & 30 - File # E43374

Canadian Registration Number (CRN): Refer to www.ueonline.com/certifications for list of approved models

EUROPEAN UNION

ATEX Directive 2014/34/EU II 2 G Ex db IIC T6 Gb II 2 D Ex tb IIIC T85°C Db

Tamb = -50°C to +80°C

UL International DEMKO A/S (N.B.# 0539) Certificate # DEMKO 08 ATEX 0717128X

EN 60079-0, 60079-1, 60079-31

II 1 G Ex ia IIC T6 Ga (OPTIONAL – code M405)

Tamb = -50° C to $+60^{\circ}$ C

UL International DEMKO A/S (N.B.# 0539) Certificate # DEMKO 11 ATEX 1105261X EN 60079-0, 60079-11, 60079-26

Pressure Equipment Directive (PED) 2014/68/EU

Compliant to PED UL 508, UL 61010

Products rated lower than 7.5 psi are outside the

scope of the PED

Low Voltage Directive (LVD) 2014/35/EU Compliant to LVD EN 61058-1, EN 61010-1

Products rated lower than 50 VAC and 75 VDC are outside

the scope of the LVD

The Low Voltage Directive does not apply to products for use in hazardous

locations

UKRAINE

Gosnadzorohrantruda Permit (OPTIONAL - code M404)

1ExdIICT6X

Tamb = -56°C to +85°C

SVODOTSTVO #719 by DVSTS VE (TCCExEE)

* See www.iecex.com/countries.htm for a list of participating members.

RUSSIA

Conforming to TR CU 012/2011 (OPTIONAL - code M406)

Certificate RU-C-US.AA87.B.00503/20

NANIO CCVE Certified 0Ex ia IIC T6 Ga X

Tamb: -50° C to $+60^{\circ}$ C 1Ex d IIC T6 Gb X

Tamb: -50°C to +80°C

ГОСТ Р МЭК 60079-0-2011; ГОСТ Р МЭК 60079-11-2010; ГОСТ ІЕС 60079-1-2011, ΓΟCT P MЭΚ 60079-31-2010; ΓΟCT 31610.26-2012/IEC

60079-26-2006

INDIA

Ex d IIC T6 Gb

Tamb = -50°C to +80°C

UL International DEMKO A/S (N.B.# 0539)

Certificate # P482128/1

EN 60079-0, 60079-01, 60079-31

INTERNATIONAL CERTIFICATION* (INCLUDES AUSTRALIA)

IECEx Certified

Ex d IIC T6 Gb

Ex tb IIIC T85°C Db

Tamb. = -50° C to 80° C

IEC 60079-0, 60079-1, 60079-31

Certificate # IECEx UL 14.0072X

Ex ia IIC T6 Ga

Tamb. = -50°C \leq Tamb \leq 60°C IEC 60079-0, 60079-11, 60079-26

Certificate # IECEx UL 14.0075X

Certification accredited by INMETRO (OPTIONAL - code M391)

Ex d IIC T6 Gb Ex tb IIIC T85°C Db

-50°C ≤ Tamb ≤ 80°C

ABNT NBR IEC 60079-0, 60079-1, 60079-31

Certificate # UL-BR 15.0174X

Ex ia IIC T6 Ga

 $-50^{\circ}C \leq Tamb \leq 60^{\circ}C$

ABNT NBR IEC 60079-0, 60079-11, 60079-26

Certificate # UL-BR 15.0169X







MODEL CHART

Model	Adjustable Set Point Range	Deadband	Over Range	Proof Pressure**
	Lower end of range on fall;		Pressure*	
	High end of range on rise			

Sensor Type 2, 316 stainless steel 1/2" NPT (female) pressure connection and welded diaphragm, 23/32" orifice for clean out purposes. High proof pressure. Not recommended for high cycling applications. Belleville actuation. (NACE MR0175 compliant with M401 option)

		psi	bar	psi	bar	psi	bar	psi	bar
	A	10 to 25	0,7 to 1,7	2 to 7	0,1 to 0,5	1000	68,9	2500	172,4
ı	В	15 to 45	1,0 to 3,1	3 to 10	0,2 to 0,7	1000	68,9	2500	172,4
(C	25 to 85	1,7 to 5,9	5 to 20	0,3 to 1,4	1000	68,9	2500	172,4
ı	D	50 to 130	3,4 to 9,0	7 to 25	0,5 to 1,7	1500	103,4	2500	172,4
ı	E	100 to 210	6,9 to 14,5	8 to 30	0,6 to 2,1	1500	103,4	2500	172,4
ı	F	160 to 400	11,0 to 27,6	10 to 50	0,7 to 3,4	1500	103,4	2500	172,4
•	G	275 to 850	19,0 to 58,6	40 to 125	2,8 to 8,6	1500	103,4	2500	172,4

Sensor Type 3, 316L stainless steel 1/2" NPT (female) pressure connection, Teflon® coated Polyimide (Kapton®) diaphragm, Buna N Oring, 1/2" orifice for clean out purposes. Belleville actuation. (NACE MR0175 compliant with M401 option)

Sensor Type 4, 316L stainless steel 1/4" NPT (female) pressure connection, Teflon® coated Polyimide (Kapton®) diaphragm, Buna N O-ring, 1/8" orifice. Belleville actuation. (NACE MR0175 compliant with M401 option)

	psi	bar	psi	bar	psi	bar	psi	bar
Α	8 to 30	0,6 to 2,1	2 to 6	0,1 to 0,4	600	41,4	1000	68,9
В	15 to 55	1,0 to 3,8	3 to 8	0,2 to 0,6	600	41,4	1000	68,9
C	30 to 170	2,1 to 11,7	5 to 15	0,3 to 1,0	600	41,4	1000	68,9
D	100 to 370	6,9 to 25,5	15 to 50	1,0 to 3,4	600	41,4	1000	68,9
E	200 to 700	13,8 to 48,3	40 to 90	2,8 to 6,2	1500	103,4	3000	206,8
F	400 to 1500	27,6 to 103,4	100 to 250	6,9 to 17,2	3000	206,8	4500	310,3
G	1000 to 3200	68,9 to 220,6	100 to 500	6,9 to 34,5	6000	413,7	10000	689,5
Н	2000 to 6000	137,9 to 413,7	400 to 800	27,6 to 55,2	8000	551,6	10000	689,5

^{*}Over Range Pressure: The maximum pressure that may be applied continuously without causing damage and maintaining set point repeatability.

**Proof Pressure: The maximum pressure to which a pressure sensor may be occasionally subjected, which causes no permanent damage. The unit may require calibration (e.g., start-up, testing).

Kalrez*, Kapton*, Teflon* & Viton* are registered trademarks of E.I. DuPont de Nemours and Company. Hastelloy® is a registered trademark of Haynes International, Inc.

Monel® is a registered trademark of The Special Metals Corporation.

Aflas® is a registered trademark of Asahi Glass.

Model	Adjustable Set Point Range	Deadband	Over Range	Proof Pressure**
	Lower end of range on fall;		Pressure*	
	High end of range on rise			

Sensor Type 5, 316L stainless steel 1/2" NPT (female) pressure connection and diaphragm, Viton® O-ring, 1/2" orifice for clean out purposes. Belleville actuation. (NACE MR0175 compliant with M401 option)

Sensor Type 6, 316L stainless steel 1/4" NPT (female) pressure connection and diaphragm, Viton® O-ring, 1/8" orifice. Belleville actuation. (NACE MR0175 compliant with M401 option)

	psi	bar	psi	bar	psi	bar	psi	bar
Α	9 to 35	0,6 to 2,4	2 to 7	0,1 to 0,5	600	41,4	1000	68,9
В	25 to 65	1,7 to 4,5	3 to 10	0,2 to 0,7	600	41,4	1000	68,9
C	50 to 150	3,4 to 10,3	5 to 15	0,3 to 1,0	600	41,4	1000	68,9
D	100 to 350	6,9 to 24,1	15 to 50	1,0 to 3,4	600	41,4	1000	68,9
Е	250 to 700	17,2 to 48,3	40 to 95	2,8 to 6,6	1500	103,4	3000	206,8
F	400 to 1500	27,6 to 103,4	100 to 300	6,9 to 20,7	3000	206,8	4500	310,3
G	1000 to 3200	68,9 to 220,6	100 to 500	6,9 to 34,5	6000	413,7	10000	689,5
Н	2000 to 6000	137,9 to 413,7	400 to 1000	27,6 to 68,9	8000	551,6	10000	689,5

Sensor Type 7, 1/2" 316L stainless steel NPT (female) pressure connection and welded diaphragm. Large 23/32" orifice for clean out purposes. Belleville actuation. (NACE MR0175 compliant with M401 option)

	psi	bar	psi	bar	psi	bar	psi	bar
Α	3 to 15	0,2 to 1,0	1 to 4	0,1 to 0,3	300	20,7	500	34,5
В	10 to 35	0,7 to 2,4	1 to 6	0,1 to 0,4	300	20,7	500	34,5
C	25 to 85	1,7 to 5,9	3 to 11	0,2 to 0,8	300	20,7	500	34,5
D	65 to 125	4,5 to 8,6	6 to 18	0,4 to 1,2	300	20,7	500	34,5

Sensor Type 8, 316L stainless steel 1/4" NPT (female) pressure connection, Teflon® coated Polyimide (Kapton®) diaphragm (optional Hastelloy® C or Monel®), Buna N O-ring (optional Kalrez®, Viton®, Ethylene Propylene, or Aflas®), 1/8" orifice. Non-Belleville actuation. (NACE MR0175 compliant with M401 option)

	psi	bar	psi	bar (unless noted)	psi	bar	psi	bar
A [†]	3 to 25	0,2 to 1,7	0.5 to 4	34,5 mbar to 0,3 bar	600	41,4	1000	68,9
В	15 to 75	1,0 to 5,2	1 to 7	0,1 to 0,5	600	41,4	1000	68,9
C	25 to 150	1,7 to 10,3	1 to 12	0,1 to 0,8	600	41,4	1000	68,9
D	50 to 450	3,4 to 31,0	3 to 36	0,2 to 2,5	2000	137,9	3000	206,8
Е	100 to 900	6,9 to 62,1	10 to 60	0,7 to 4,1	2000	137,9	3000	206,8
F	500 to 2500	34,5 to 172,4	20 to 140	1,4 to 9,7	6000	413,7	7500	517,1
G	700 to 4000	48,3 to 275,8	40 to 250	2,8 to 17,2	6000	413,7	7500	517,1

Application Note: The use of metallic diaphragms where higher pressure shock or heavy cycling is expected should be avoided. Sensor Type 7 or 9 should not be used where system or

vacuum pressure might exceed 26" Hg Vac.

^{*}Over Range Pressure: The maximum pressure that may be applied continuously without causing damage and maintaining set point repeatability.

**Proof Pressure: The maximum pressure that may be applied continuously without causing damage and maintaining set point repeatability.

**Proof Pressure: The maximum pressure to which a pressure sensor may be occasionally subjected, which causes no permanent damage. The unit may require calibration (e.g., start-up, testing).

†Adjustable range is 4 to 25 psi (0,3 to 1,7 bar) for DPDT switch output



MODEL CHART

Model	Adjustable Set Lower end of ran High end of ran	nge on fall;	Deadband		Over F Pressu		Proof	Pre	ssure [†]	**
				connection and weld compliant with M40		ragm. Larg	ge 23/32" o	rifice	for	
	psi	bar	psi	mbar (unless noted) psi	bar	psi		bar	
Α	1 to 15	0,1 to 1,0	0.5 to 2	34,5 to 137,9	300	20,7	500		34,5	
В	3 to 50	0,2 to 3,4	0.5 to 4	34,5 to 275,8	300	20,7	500		34,5	
C	5 to 100	0,3 to 6,9	1.0 to 8	0,1 to 06 bar	300	20,7	500		34,5	
	ype P, 316 stainless leville actuation. (N			ith 316 stainless steel option)	1/4" NPT	(female) p	oressure co	nnec	tion.	
	psi	bar	psi	bar	psi	bar	psi		bar	
0	50 to 500	3,4 to 34,5	15 to 65	1,0 to 4,5	6000	413,7	10000)	689,5	5
1	300 to 1200	20,7 to 82,7	30 to 200	2,1 to 13,8	6000	413,7	10000)	689,5	5
2	600 to 2600	41,4 to 179,3	50 to 350	3,4 to 24,1	6000	413,7	10000)	689,5	5
3	1200 to 5500	82,7 to 379,2	100 to 800	6,9 to 55,2	7500	517,1	10000)	689,5	5
4	4000 to 12,500	275,8 to 861,9	300 to 1450	20,7 to 99,9	14000	965,3	16000)	1103	,2
	ype P, 316 stainless : e actuation. (NACE N			ith 316 stainless steel on)	1/4" NPT	(female) p	oressure co	nnec	tion.	
	psi	bar	psi	bar	psi	bar	psi		bar	
6	300 to 1200	20,7 to 82,7	30 to 200	2,1 to 13,8	6000	413,7	10000)	689,5	5
7	600 to 2600	41,4 to 179,3	50 to 350	3,4 to 24,1	6000	413,7	10000)	689,5	5
8	1200 to 5500	82,7 to 379,2	100 to 800	6,9 to 55,2	7500	517,1	10000)	689,5	5
9	4000 to 12,500	275,8 to 861,9	300 to 1450	20,7 to 99,9	14000	965,3	16000)	1103	,2
Sensor T	ype W, 316L stainles	ss steel 1/2" NPT (fe	emale) pressure	connection and Bun	a N diaph	nragm. Nor	n-Bellevile a	nctua	ation.	
-	"wc (unless noted)	mbar (unless note	ed)	"wc (unless noted)	mbar	psi	bar		psi	bar
1	30 "Hg Vac to 0 psi	-1 to 0 bar	0.2 to 2 "Hg	6,8 to 67,7	75	5,2 100	6,9			
2	-20 to 20	-49,9 to 49,8	0.5 to 3.5	1,2 to 8,7	75	5,2 100	6,9			
3	2 to 50	5,0 to 125,5	0.5 to 5	1,2 to 12,4	75	5,2	100		6,9	
4	10 to 200	24,9 to 497,8	1 to 10	2,5 to 24,9	75	5,2	100	6,9		
**Proof Pres	sure: The maximum pressure	to which a pressure sensor r	may be occasionally sub	causing damage and maintain	nent damage.	The unit may re				

^{**}Proof Pressure: The maximum pressure to which a pressure sensor may be occasionally subjected, which causes no permanent damage. The unit may require calibration (e.g., start-up, testing). Application Note: The use of metallic diaphragms where higher pressure shock or heavy cycling is expected should be avoided. Sensor Type 7 to 9 should not be used where system or startup vacuum pressure might exceed 26" Hg Vac.

DIFFERENTIAL PRESSURE MODEL CHART

Model Adjustable Set Point Range Deadband Lower end of range on fall; High end of range on rise	Working Pressure Range***	Proof Pressure**
---	---------------------------------	------------------

Sensor Type K, Buna N diaphragm and sealing diaphragms with epoxy coated aluminum housing and 1/8" NPT (female) pressure connections. Non-Belleville actuation. 303/304 stainless steel mounting bracket attached.

SPDT Switch (single pole double throw)‡

	"wcd	mbar	"WC	mbar	psi (unless noted)	bar	psi	bar
1 2 3	0.7 to 10 3 to 20 10 to 150	1,7 to 24,9 7,5 to 49,8 24,9 to 373,4	0.2 to 1 0.3 to 1.5 0.3 to 5	0,5 to 2,5 0,7 to 3,7 0,7 to 12,4	30 "Hg Vac to 200 30 "Hg Vac to 200 30 "Hg Vac to 200	-1,0 to 13,8 -1,0 to 13,8 -1,0 to 13,8	400 400 400	27,6 27,6 27,6
	psid	bar	psi	bar (unless noted)	psi (unless noted)	bar	psi	bar

Sensor Type K, Buna N diaphragm and sealing diaphragms with epoxy coated aluminum housing and 1/8" NPT (female) pressure connections. Non-Belleville actuation. 303/304 stainless steel mounting bracket attached.

DPDT Switch (double pole double throw)‡

	"wcd	mbar	"WC	mbar	psi (unless noted)	bar	psi	bar
1	0.7 to 10	1,7 to 24,9	0.2 to 1.5	0,5 to 3,7	30 "Hg Vac to 200	-1,0 to 13,8	400	27,6
2	3 to 20	7,5 to 49,8	0.3 to 2	0,7 to 5,0	30 "Hg Vac to 200	-1,0 to 13,8	400	27,6
3	10 to 150	24,9 to 373,4	0.3 to 8	0,7 to 19,9	30 "Hg Vac to 200	-1,0 to 13,8	400	27,6
	psid	bar	psi	bar	psi	bar	psi	bar
4	2 to 20	0,1 to 1,4	0.3 to 3	20,7 to 206,8 mbar	30 "Hg Vac to 1200	-1,0 to 82,7	2500	172,4
5	5 to 80	0,3 to 5,5	1 to 10	0,1 to 0,7	30 "Hg Vac to 1200	-1,0 to 82,7	2500	172,4
6	10 to 150	0,7 to 10,3	1 to 15	0,1 to 1,0	30 "Hg Vac to 1200	-1,0 to 82,7	2500	172,4

TEMPERATURE MODEL CHART

Installation may require optional mounting bracket kit (P/N 62169-13, see page 14)

Model	Adjustable	Set Point Range	Max. Ter	mperature	Stem or Bulb Size ⁺
	°F	°C	°F	°C	
Sensor	Type L, 316 Sta	inless steel immers	ion stem 1	/2" NPT (male). Non	-Belleville actuation
1	0 to 225	-17.8 to 107.2	275	135	9/16" x 1-25/32" below thread
2	200 to 425	93.3 to 218.3	475	246.1	9/16" x 1-25/32" below thread
Sensor	Type R, 304 Sta	inless steel bulb ar	nd capillary.	. Non-Belleville actu	ation
1	-130 to 120	-90 to 48.9	170	76.7	3/8 O.D. x 4-7/8"
2	0 to 150	-17.8 to 65.6	200	93.3	3/8 O.D. x 7-1/4"
3	50 to 300	10 to 148.9	350	176.7	3/8 O.D. x 4-7/8"
4	150 to 650	65.6 to 343.3	700	371.1	3/8 O.D. x 4"

^{**}Proof Pressure: The maximum pressure to which a pressure sensor may be occasionally subjected, which causes no permanent damage. The unit may require calibration (e.g., start-up,

testing)

*** Working Pressure Range (psi): The pressure that can be safely applied to both the high side and low side ports simultaneously while still maintaining set point adjustability. The difference in pressure between the high side and low side ports must never exceed the Adjustable Set Point Range. ‡See page 10 on building a part number for switch codes.

⁺Optional capillary lengths, stainless steel armored covered capillary available - consult UE. Standard capillary length is 6 ft.



HOW TO ORDER

Select letter or number "codes" to construct part number

Part #	12	S	Н	S	N		2	F	Ą	M2	201
	Series	Housing Material	Electrical Rating	Switch Output	Electri Condu		Sensor Type	Мо	del	Opt	ions
		Material	Nating	Output	Condo	uit		(see next page)			
				12	S	Н	S	N	2	Α	M2
ORDER CODE		DECCRIPTION	NNI.	1	- 1	1	1		ı	ı	
CODE		DESCRIPTIO	ЛN								
	12 DESIGNATI										
2	Designation	for 12 series	oroduct line								
HOUSI	NG MATERIAL										
5	316 Stainles										
-	1 amp										
1	5 amp										
WITCH	HOUTPUT —										
•	SPDT										
)	DPDT. Availa	ble for pressu	ire models only.								
LECTR	RICAL CONDUI	<u> </u>									
N	1/2" NPT ma	le									
M	M20 metric	thread									
SENSO	<u>R TYPE</u> (Bellevi	ille actuated ι	ınless noted)_								
2	Welded 316 st	tainless steel di	aphragm, 1/2" NF	PT (female) press	ure conne	ection					
3	Teflon® coate	d Polyimide (Ka	apton®) diaphragr	m, Buna N O-ring	g, 1/2" NPT	Γ (femal	le) pressur	e connec	tion		
ļ	Teflon® coate	d Polyimide (Ka	apton®) diaphragr	m, Buna N O-ring	g, 1/4" NPT	(femal	e) pressur	e connec	tion		
5	316L stainless	steel diaphrag	m, Viton® O-ring,	1/2" NPT (femal	e) pressure	e conne	ection				
5	316L stainless	steel diaphrag	m, Viton® O-ring,	1/4" NPT (female	e) pressure	e conne	ection				
7	Welded 316L stainless steel diaphragm, 1/2" NPT (female) pressure connection										
3	Kapton® diap	hragm, Buna N	O-ring, 1/4" NPT ((female) pressure	e connecti	ion (no	n-Bellevill	e actuati	on)		
)	316L stainless steel welded diaphragm, 1/2" NPT (female) pressure connection (non-Belleville actuation)										
)	316 stainless steel piston, Buna N O-ring, 1/4" NPT (female) 316 stainless steel pressure connections (Belleville and non-Belleville actuated models)										
V	316 Stainless steel 1/2" NPT (female) pressure connection and Buna N diaphragm (Non-Belleville actuation)										
(•	_	ng diaphragm, 1/	8" NPT (female) _I	oressure c	onnect	ions				
			m, temperature (N	Non-Relleville ac	tuated)						
_	Local Infount,	IIIIIIICI SIOTI SCCI	in compenatare (i	ton benevine ac	taatea					- 1	

A, B, C, D, E, See model chart for range specifications F, G, H, 0, 1, 2, 3, 4, 5, 6, 7, 8, 9

12 S H S N 2 A M201

OPTION	<u> </u>
M201	Factory set switch, specify increasing or decreasing pressure
M277	Range in kPa or mPa on nameplate, factory selected. NOT AVAILABLE ON TEMPERATURE VERSIONS
M278	Range in kg/cm ² on nameplate. NOT AVAILABLE ON TEMPERATURE VERSIONS
M391	Flame proof, intrinsic safety for INMETRO compliance
M401	NACE MR0175 wetted material compliance. AVAILABLE SENSOR TYPES 2A-F, 3A-H, 4A-H, 5A-H, 6A-H,7A-D, 8A-G, 9A-C, P0-9. Consult factory for details on repeatability, deadband, and overpressure limits
M404	Flameproof compliance for Ukraine per Gosnadzorohrantruda permits
M405	European ATEX intrinsic safety compliance
M406	Flameproof and intrinsic safety compliance per EAC standards
M421	EAC flameproof junction box, pre-wired (not UL approved) To be ordered with M406 option. (NOT AVAILABLE ON M20 METRIC THREAD ELECTRICAL CONDUIT VERSION). THREADS TO STANDARD CONDUIT 1/2" NPT (M)
M423	ATEX flameproof compliant junction box, pre-wired (not UL approved) (NOT AVAILABLE ON M20 METRIC THREAD ELECTRICAL CONDUIT VERSION). THREADS TO STANDARD CONDUIT 1/2" NPT (M)
M430	Cover lock
M444	Paper ID tag
M446	Stainless steel ID tag and wire attachment. Text limited to 2 lines of 25 characters each, max.
M460	External ground screw; required for non-metallic conduit systems (ATEX installations only). NOT AVAILABLE WITH OPTION M515
M476	316 Stainless steel construction, pressure connections only; Viton® sensor material. AVAILABLE SENSOR TYPE K ONLY.
M511	1/4" NPT (male) pressure connection for sensor types 3, 4, 5, 6 and 8 only
M513	UL/CSA approved, explosion proof junction box, pre-wired (meets enclosure 4). NOT AVAILABLE ON M20 METRIC THREAD ELECTRICAL CONDUIT VERSION. NOT ATEX COMPLIANT.
M515	DIN Connector-4 terminal; conforms to DIN 43650 Form A, (not approved for Class I Div. 1 & 2 or ATEX flameproof requirements). NOT AVAILABLE ON DPDT OR METRIC THREAD ELECTRICAL CONDUIT VERSIONS. NOT AVAILABLE WITH OPTION M405
M540	Viton® wetted parts with standard pressure connection. Deadband and low end of range may increase. Available sensor types 8 (O-ring; diaphragm changes to 316L Stainless Steel), P (O-ring), K (diaphragm, O-ring and sealing diaphragms) & w (diaphragm, O-ring) only.
M550	Oxygen service cleaned in accordance with ASTM G93, Verification type 1, tests 1 through 3. NOT AVAILABLE ON SENSOR TYPES 3 AND 4
M924	7/16-20 SAE (female) stainless steel pressure connection. AVAILABLE SENSOR TYPE 6 ONLY

ACCESSORIES

62169-13 Mounting bracket kit (available with pressure and temperature models only)

62169-31 ATEX flameproof compliant junction box and terminal kit, not pre-wired (see option code M423 for description)

6361-694 Junction box and terminal kit, not pre-wired (see option code M513 for description)

12-B-11 www.ueonline.com 11



OPTIONAL SENSOR MATERIALS FOR CORROSIVE MEDIA AVAILABLE SENSOR TYPE 8 ONLY

XD002	Hastelloy® C276 diaphragm NACE MR0175 compliant with M401 option
	, , , , , , , , , , , , , , , , , , , ,
XD003	Monel® 400 diaphragm NACE MR0175 compliant with M401 option
XP112	1/2" NPT Hastelloy® C276 pressure connection NACE MR0175 compliant with M401 option
XP113	1/2" NPT Monel® 400 pressure connection NACE MR0175 compliant with M401 option
XR211	Kalrez ® O-ring
XR213	Ethylene propylene O-ring
XR214	Aflas ® O-ring
XR216	Viton O-ring

OPTIONS FOR TEMPERATURE MODELS

UNION CONNECTORS*

eplacement Number	Description			
04 Stainless Steel				
D6213-28	1/2" NPT w/ 3/4" bushing			
D6213-46	3/4" NPT			
D6213-50	1/2" NPT			
	04 Stainless Steel D6213-28 D6213-46			

THERMOWELLS*

For all bulb & capillary switches

i di ali buib	a capillary switches				
	316 Stainless Stee	<u>el</u>			
W076	SD6225-76	3/4" NPT, 4.5" BT	For all imr	mersion stem switches	
W193	SD6225-193	1/2" NPT, 4.5" BT		316 Stainless Steel	
W119	SD6225-119	3/4" NPT, 7.5" BT	W140	SD 6225-140	3/4" NPT x 1-23/32" BT
W177	SD6225-177	1/2" NPT, 7.5" BT			

OPTIONAL LENGTHS

Optional capillary length to 50' may be available in 304 st/st. Consult UE for availability, and regarding repeatability and ambient effects on capillary lengths over 30'.


304 stainless steel armor capillary protection is available to lengths less than or equal to capillary length.

DIMENSIONAL DRAWINGS

Dimensional drawings for all models may be found at www.ueonline.com

DESCRIPE & TEMPERATURE CHITCH / COMMESTICAL CHART

PRESSURE & TEMPERATURE SWITCH / CONNECTION CHART							
		Dimension "A"		Dimension "B"		Dimensi	on "C"
Type	Description	Inches	mm	Inches	mm	Inches	mm
2	1/2" NPT (female)	4.4	111.1	0.7	16.5	1-1/16	27.0
3, 5	1/2" NPT (female)	4.4	111.1	0.6	15.2	1-1/16	27.0
4, 6, 8	1/4" NPT (female)	4.4	111.1	0.6	15.2	1-1/16	27.0
7, 9	1/2" NPT (female)	4.0	100.3	1.6	40.6	1-1/8	28.6
P1-P9	1/4"NPT (female)	4.4	111.1	1.0	25.4	1-1/16	27.0
W1-W2	1/2" NPT (female)	4.0	100.3	2.2	55.9	1-1/16	27.0
W3-W4	1/2" NPT (female)	4.0	100.3	1.7	42.9	1-1/16	27.0
K1-K3	1/8"NPT (female)	4.4	111.1	1.7	42.9	N/A	N/A
K4-K6	1/8"NPT (female)	4.4	111.1	1.8	44.5	N/A	N/A
L1-L2	Local Temperature	4.4	111.1	2.9	73.7	1-1/16	27.0
R1-R4	Remote Temperature	4.4	111.1	0.6	15.2	N/A	N/A

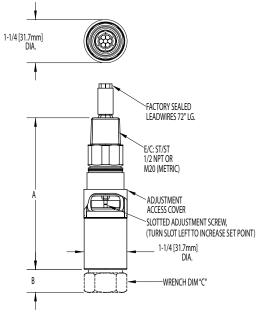

^{*}Dimensional drawings for union connectors and thermowells may be found at www.ueonline.com


DIMENSIONAL DRAWINGS

Dimensional drawings for all models may be found at www.ueonline.com


SENSOR DETAILS

Pressure


TYPES 2, 3, 5




TYPES 4, 6, 8 PO-P9



TYPES 7, 9

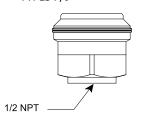


TYPE W




Differential Pressure (Shown with mounting bracket attached)

TYPE K1-K3

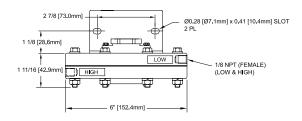


TYPES K4-K6

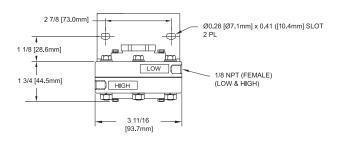


Temperature

TYPE R

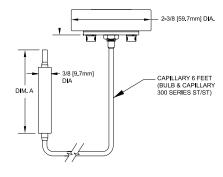

BULB DIMENSIONS						
	Dimension A					
Types	Inches	mm				
R1	4-7/8"	123.8				
R2	7-1/4"	184.2				
R3	4-7/8"	123.8				
R4	4"	101.6				

TYPE L

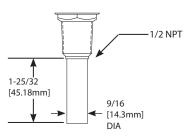





DIMENSIONAL DRAWINGS

Dimensional drawings for all models may be found at www.UEonline.com


OPTIONAL MOUNTING BRACKET KIT 62169-13

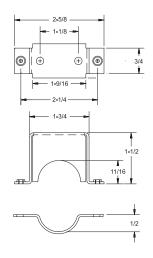

OPTION M421 & M423 JUNCTION BOX

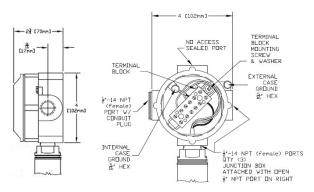


OPTION M430 COVER LOCK



OPTION M460 EXTERNAL GROUNDING SCREW




OPTION M513 JUNCTION BOX

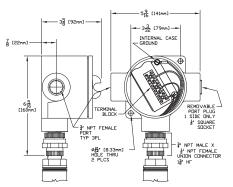

Junction box meets enclosure type 4 requirements only. Not ATEX compliant (see option M423 for ATEX junction box)

OPTION M515 DIN CONNECTOR

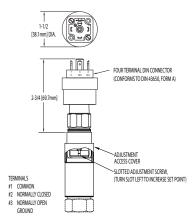

Does not meet Div 1 or 2 , or ATEX requirements.

ALTERNATIVE PRODUCTS FROM UE

Vanguard Gas Detector – Toxic and Combustible Gas Detector

- WirelessHART Communication
- 5+ year battery life
- Field interchangeable toxic and combustible gas sensors
- Interoperable with existing WirelessHART networks and asset management systems (AMS)
- Easy calibration and operation
- Heavy duty design with Class 1, Div 1 & 2 hazardous location approvals





- Combines functions of transmitter, PLC and safety relay
- Improve Uptime with safety diagnostics
- Capable of switching the final element directly
- Meet regulatory requirements with SIL2 IEC 61508 certification
- Simplify complex safety systems with SFF = 98.8



- Easy and secure programming via local keypad or read-only remote HART® 7 communications
- Money-saving drop-in replacement for mechanical switches using the 2-wire switch-only version
- Achieve high reliability through IAW™ self-diagnostics and separate alarm contact
- Gain Asset Management data through HART 7 reporting
- A complete, flexible solution 4-20mA for trending plus 2 relays for local switching - all accessible via HART® 7 Communications Protocol





One Series for Division 1 & 2 (Zone 0, 1, 2)















120 Series

- Explosion-proof line of pressure, differential pressure, and temperature models with wide selection of ranges, sensors and pressure connections
- Div. 1, Zone 1 certified for hazardous locations
- Single or dual switch outputs
- Welded stainless steel diaphragm pressure sensor
- Internal or external set point adjustment















RECOMMENDED PRACTICES AND WARNINGS

United Electric Controls Company recommends careful consideration of the following factors when specifying and installing UE pressure transmitters. Before installing a unit, the Installation and Maintenance instructions provided with unit must be read and understood.

- To avoid damaging unit, proof pressure and maximum temperature limits stated in literature and on nameplates must never be exceeded, even by surges in the system. Operation of the unit up to maximum pressure or temperature is acceptable on a limited basis (i.e., start-up, testing) but continuous operation must be restricted to the designated adjustable range. Excessive cycling at maximum pressure or temperature limits could reduce sensor life.
- A back-up unit is necessary for applications where damage to a primary unit could endanger life, limb or property. A high or low limit switch is necessary for applications where a dangerous runaway condition could result.
- Install unit where shock, vibration and ambient temperature fluctuations will not damage unit or affect operation. When applicable, orient unit so that moisture does not enter the enclosure via the electrical connection. When appropriate, this entry point should be sealed to prevent moisture entry.
- Unit must not be altered or modified after shipment. Consult UE if modification is necessary.
- Monitor operation to observe warning signs of possible damage to unit, such as drift. Check unit immediately.
- Preventative maintenance and periodic testing is necessary for critical applications where damage could endanger property or personnel.
- Supply voltage stated in literature and on nameplate must not be exceeded. Overload on a transmitter can cause damage, even on the first cycle. Wire unit according to local and national electrical codes, using wire size recommended in installation sheet
- Do not mount unit in ambient temp. exceeding published limits.

LIMITED WARRANTY

Seller warrants that the product hereby purchased is, upon delivery, free from defects in material and workmanship and that any such product which is found to be defective in such workmanship or material will be repaired or replaced by Seller (Ex-works, Factory, Watertown, Massachusetts. INCOTERMS); provided, however, that this warranty applies only to equipment found to be so defective within a period of 36 months from the date of manufacture by the Seller. Seller shall not be obligated under this warranty for alleged defects which examination discloses are due to tampering, misuse, neglect, improper storage, and in any case where products are disassembled by anyone other than authorized Seller's representatives. EXCEPT FOR THE LIMITED WARRANTY OF REPAIR AND REPLACEMENT STATED ABOVE, SELLER DISCLAIMS ALL WARRANTIES WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.

LIMITATION OF SELLER'S LIABILITY

SELLER'S LIABILITY TO BUYER FOR ANY LOSS OR CLAIM, INCLUDING LIABILITY INCURRED IN CONNECTION WITH (I) BREACH OF ANY WARRANTY WHATSOEVER, EXPRESSED OR IMPLIED, (II) A BREACH OF CONTRACT, (III) A NEGLIGENT ACT OR ACTS (OR NEGLIGENT FAILURE TO ACT) COMMITTED BY SELLER, OR (IV) AN ACT FOR WHICH STRICT LIABILITY WILL BE INPUTTED TO SELLER, IS LIMITED TO THE "LIMITED WARRANTY" OF REPAIR AND/OR REPLACEMENT AS SO STATED IN OUR WARRANTY OF PRODUCT. IN NO EVENT SHALL THE SELLER BE LIABLE FOR ANY SPECIAL, INDIRECT, CONSEQUENTIAL OR OTHER DAMAGES OF A LIKE GENERAL NATURE, INCLUDING, WITHOUT LIMITATION, LOSS OF PROFITS OR PRODUCTION, OR LOSS OR EXPENSES OF ANY NATURE INCURRED BY THE BUYER OR ANY THIRD PARTY.

UE specifications subject to change without notice.

FOR A LIST OF OUR INTERNATIONAL AND DOMESTIC REGIONAL SALES OFFICES PLEASE VISIT OUR WEBPAGE WWW.UEONLINE.COM



180 Dexter Avenue Watertown, MA 02472 USA Telephone: 617 926-1000 Fax: 617 926-2568 http://www.ueonline.com

CP0913250